


1. Check the gear oil level of the high pressure pump every day, the level should be maintained in the middle of the observation window to 5 mm upwards. Otherwise, it is forbidden to start the high pressure water pump! For first time usage, gear oil must be replaced within 30-40 days after installation is completed.        SAE85W-90

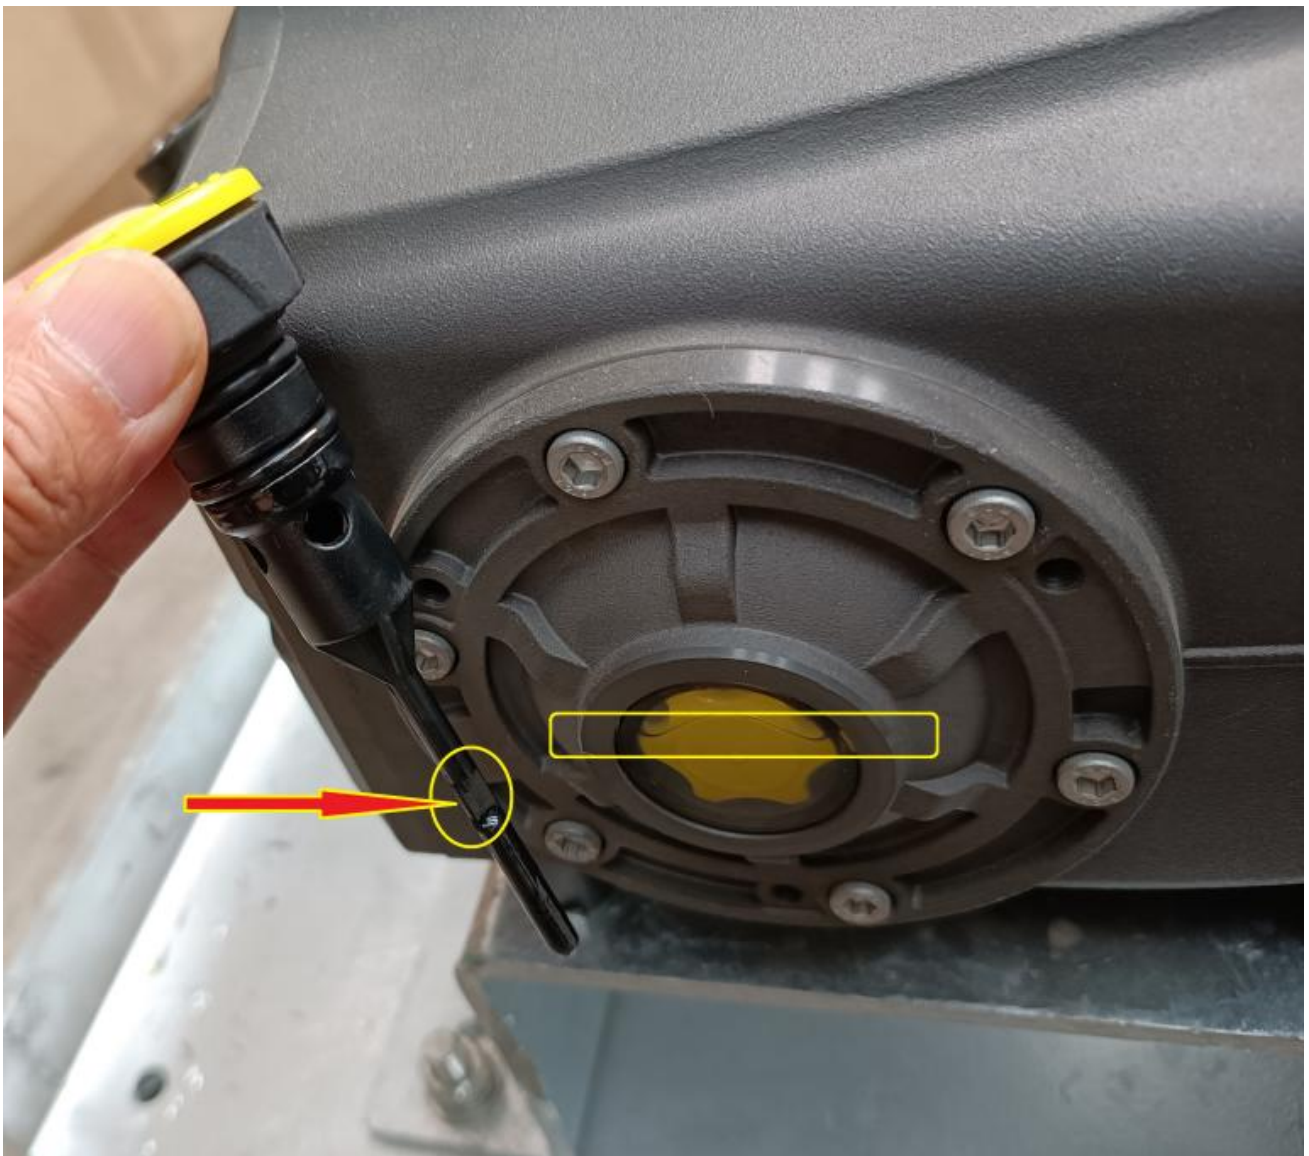

2、 Check the water coming out of the nozzle daily and clean the foreign matter in the pipeline in time to keep the water coming out in the best condition.



**Maintain the best  
spray condition**



3、If the equipment does not work for more than a week, please use clean water to clean the foam pipe to avoid blockage of the pipe.

